

## Owner's Manual Supplement (EN)

### BAD BOY Supernova Lightpipe Unit Seal Lubrication



**To prevent seal damage and ensure a good insert, periodically:**

1. Clean the units seals with a dry shop towel.
2. Place a pea-size drop of a high-quality water-based grease on the seals.
3. Spread the grease to form a light layer and remove the excess with the clean shop towel.

#### **NOTICE**

**DO NOT USE PETROLEUM-BASED SOLVENTS, CLEANERS, OR LUBRICANTS.**

The Supernova Lightpipe unit seal can be damaged if exposed to the above products. This will compromise the sealing and may make removing/installing the unit difficult.

**USE ONLY A HIGH-QUALITY WATER-BASED GREASE TO LUBRICATE.**