

Publication Title:


Publication No.

## System Integration™ (Si)

KL4013.PDF

### Mountain Bike Bottom Bracket Assembly

September 2003

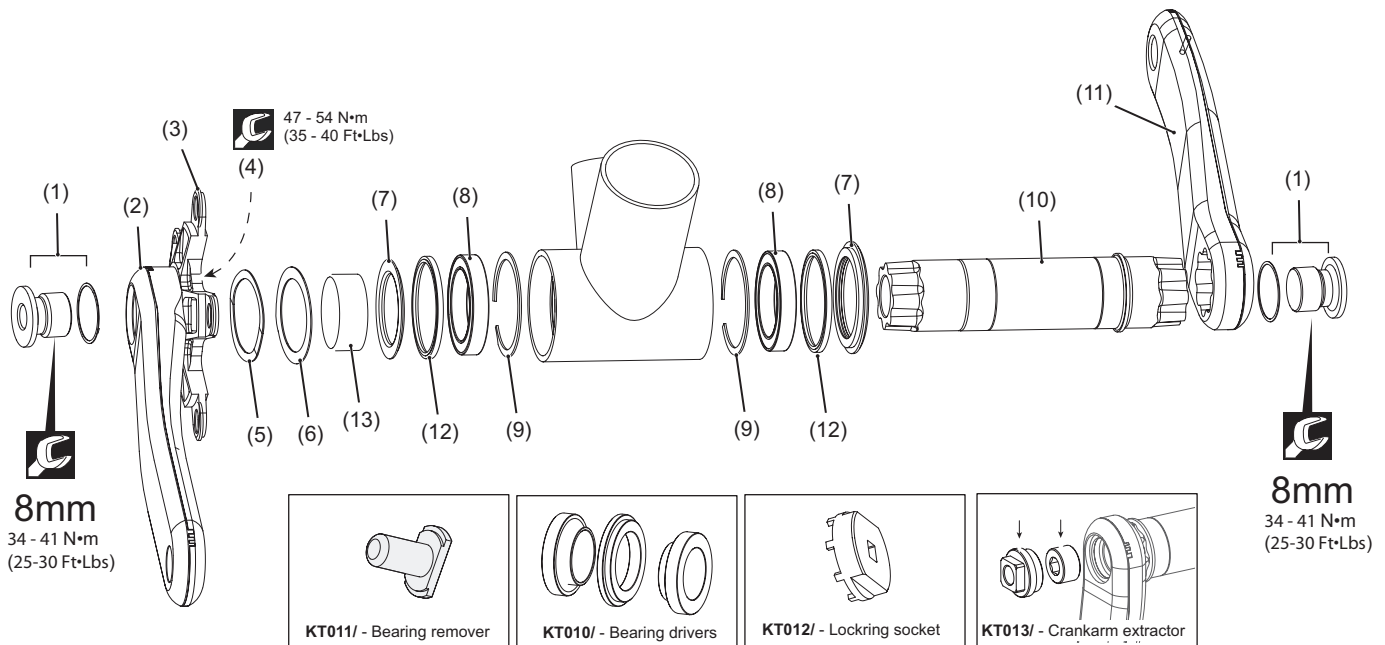

ITEM	CANNONDALE KIT #	KIT DESCRIPTION	NOTES
1	QC614/	Crankarm bolt kit includes 2 bolts and 2 washers	
2	QC607/	Crankarm, right, 170mm	
2	QC609/	Crankarm, right, 172.5mm	
2	QC611/	Crankarm, right, 175mm	
3	QC076/	Spider, mtn, double	1mm spacers btwn inner ring and spider
3	QC075/	Spider, mtn, triple	1mm spacers btwn outer ring and spider
4	QC613/	Lockring	
5	QC618/	Wave washer	
6	QC617	Shim	5 per kit
7	QC615	Shield	2 per kit
8	KB6180/	Bearing	2 per kit
9	QC616/	Circlip	2 per kit
10	QC071/	Spindle, double, 122mm	
10	QC070/	Spindle, triple, 128mm	
11	QC606/	Crankarm, left, 170mm	
11	QC608/	Crankarm, left 172.5mm	
11	QC610/	Crankarm, left 175mm	
12	QC074	Bearing seal	2 per kit
13	QC073	Spacer, 12mm, for 128mm spindle	
13	QC072	Spacer, 9mm, for 122mm spindle	
N/S	QC077/	Chainring spacer, 1mm	5 per kit

#### Contact Us:

**Cannondale Bicycle Corporation**  
 172 Friendship Road  
 Bedford, Pennsylvania 15522  
 (Voice): 1-800-BIKEUSA  
 (Fax): 814-623-6173  
 custserv@cannondale.com

#### Cannondale Australia

Unit 6, 4 Prosperity Parade  
 Warriewood N.S.W 2102  
 Australia  
 Phone(02)9979 5851  
 Fax(02)9979 5688  
 cannondaleaustralia@cannondale.com

#### Cannondale Japan

12-5 Harayamadai  
 5-cho Sakai City  
 Osaka, Japan 590-0132  
 (Voice): 011.81.722.99.9399  
 (Fax): 0722-93-6166  
 cjcustserv@cannondale.com

#### Cannondale Europe

mail: Postbus 5100  
 visits: Hanzepoort 27  
 7570 GC Oldenzaal  
 Netherlands  
 (Voice): +31 541 573580  
 (Fax): 31-5415-14240  
 servicedeskeurope@cannondale.com